

CHARGING THE EARBUDS

-  Charge the earbuds before using it for the first time.
-  Plug in the cable and charge for 1 hour.
-  If you hear a long beep, the earbuds need to be charged.



Connect the charging cable to charging ports



Red is charging.




Blue is fully charged!

USING EARBUDS AS A PAIR

Your earbuds will work best if it is within 30 ft. of your smart device. You may experience the sound briefly cutting off if you are out of range or if your wireless connection is weak. If the earbuds are not paired with a device after 5 minutes, it will turn off automatically.



Hold the button on both earbuds for 4 seconds till the light flashes red and blue.

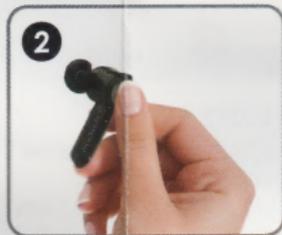

The earbuds will pair to each other automatically and one of the earbud will stop flashing.



Turn on Bluetooth® on your phone or tablet. Choose "DG-EBTW". Enter "0000" if asked. You're paired!




To turn ON/OFF press and hold the button on one earbud for 3 seconds.

USING EARBUDS FOR DIFFERENT DEVICES


The earbuds can be paired to different devices. For example, you can use one earbud with a smart phone and the other earbud for a tablet.



Hold the button on one earbud for 4 seconds till the light flashes red and blue.

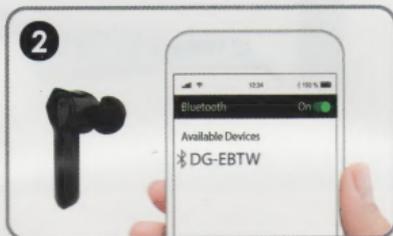

Select "DG-EBTW" from the bluetooth menu of your first device. Enter PIN code "0000" if asked. This earbud is ready to use.

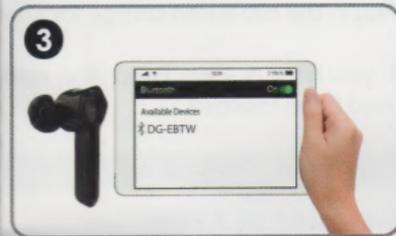

Hold the button on another earbud for 4 seconds till the light flashes red and blue. Select "DG-EBTW" from the bluetooth menu of your second device. Enter PIN code "0000" if asked. The second earbud is ready to use.

MUSIC CONTROLS

- Press the button once to pause your music.
- Press the button for 2 seconds is to skip to the next track.
- Volume control is only through your smart phone or wireless device.

USING YOUR EARBUDS FOR CALLS

- Press the button once to answer or end call.
- Press the button twice to reject a call.
- Press the button twice is to redial last call.

CONNECTION LOST?

- If only one earbud is working, press the other earbud for 3 seconds to reconnect.
- If pairing two earbuds does not work, turn off the earbuds and repeat the steps again in "Using earbuds as a pair".
- Make sure your earbuds are within range of your smart device.
- If you hear a long beep, you need to recharge your earbuds. Connection may be lost due to low battery.